

Warm Tips:

Please read the manual carefully before using the product.

Operation Instruction for Display Cabinet



CE

WDG series

Contents

Precaution.....	1
Transportation and handling.....	2
Installation and operation.....	2
Maintenance.....	3
Troubleshooting.....	4
Structure diagram.....	5
Circuit diagram.....	6
Setting of the digital controller.....	7
Major technical parameters.....	8
Disposal of the product.....	8
Warranty Information.....	9

Precaution

- 1 Please read the manual carefully before using the cabinet. For any doubt, please contact our company.
- 2 This series of products are mainly applicable to refrigeration and display cakes and relevant food. During normal operation, the temperature inside the cabinet is 2 ~ 10°C. Do not use this equipment for other purposes in case of serious accidents.
- 3 The equipment is suitable to be placed in supermarket, cake store and hotels.
- 4 The equipment shall be put at dry place with good ventilation. Don't put it near any heat source or dust. Don't place it directly under the sunshine.
- 5 Put the equipment on a flat and solid place. The distance from the wall or other objects shall not be less than 20cm.
- 6 It is a kind of electrical equipment. Please pay attention to the safety.
 - Independently single-phase three-pole socket shall be used. The earth wire port (E) of the socket shall be reliably grounded.
 - The power supply shall be 220 ~ 240V/50Hz. Otherwise, power supply stabilizer with capacity matching with the equipment power shall be installed to ensure smooth operation of the equipment.
 - The power cord of the equipment shall not be directly placed in the aisle. Avoid heavy weight and sharp objects.
 - Do not operate the equipment with wet or naked hand or foot.
 - Please cut off the power supply if the equipment is not to be used for long time.
 - Please cut off the power supply before installation or dismantling the parts.
 - Never flush the equipment directly with water; otherwise the parts will get wet and current leakage might be resulted.
 - In case of electrical or refrigeration failure, service agent authorized by the manufacturer or professional maintenance staff shall be responsible for the maintenance work in case of danger or expanded failure.
- 7 Do not store explosive substances such as aerosol cans with a flammable propellant inside the appliance.
- 8 **WARNING** – Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- 9 **WARNING** – Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- 10 WARNING – Do not damage the refrigerant circuit.
- 11 WARNING – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 12 Please according to local regulations regarding disposal of the appliance for its flammable blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.
- 13 If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 14 The maximum loading of every shelf is 20kg.
- 15 Climate class 3 means 25°C,RH60%.
- 16 This appliance can be used by children aged from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 17 Children shall not play with the appliance.
- 18 Cleaning and user maintenance shall not be made by children without supervision.

Transportation and handling

- 1 Special package box will be used for the equipment for delivery. Keep the equipment erect during transportation and handling.
- 2 Please carefully check the package box after receiving the product to ensure that the equipment is not damaged during transportation.
- 3 When removing the package box, carefully move away the wood plate in case of scratch the equipment.
- 4 In case that the equipment tilts during the transportation and handling, the lubricant in the compressor may flow into the cooling loop. Therefore, in order to ensure the lubricant flows back to the compressor, it is necessary to keep the equipment erect for 24 hours before it starts to work.
- 5 Do not throw away the package removed randomly. Please dispose as per relevant local rules and regulations.

Installation and operation

- 1 After the equipment is installed, please carefully clean parts in the cabinet .Then wipe clean the bottom cover plate and shelf, put them on corresponding place, close the cabinet door and get it connected to the

power supply.

- 2 Turn on the lighting switch, check light on each shelf is normal.
- 3 The controller is delivered with default parameters. Do not alter the parameters casually except for special need.
- 4 When running for the first time, it should run without load for 2 hours to ensure the refrigeration system is working normally. Only when the temperature within the cabinet is reduced within the indicated scope can the food be put into the cabinet.
- 5 Don't put too much over-hot food in the cabinet to prevent instantaneous high load. The food shall not block the air outlet and air inlet. Nor shall it be close to side glass. Otherwise it will lead to condensation.
- 6 To save electricity, the heating wire switch is defaulted to be closed. If the environment humidity is large, and there is condensation on the front glass, please open it for defogging.
- 7 To keep the taste of the food, please have the equipment running 24 hours a day.
- 8 During the frosting process, the temperature of the cabinet may rise slightly. When the frosting end, it will return to normal .

Maintenance

- 1 In order to ensure food health and quality, please ensure to that the equipment is cleaned frequently.
- 2 Before cleaning, plug off the power supply.
- 3 Use neutral detergent and mild water to clean the cabinet. To get rid of the residual of the detergent, please use clean cloth to wipe repeatedly.
- 4 Clean the dust and sundries on the condenser regularly on monthly basis. Take off the dustproof hood, flush the filtration mesh with clean water and then put it back after being dried-out.
- 5 Do not use any organize solvent (gasoline or alcohol etc.) to clean the equipment. Parts inside the equipment may be damaged. Besides, explosive gas may be generated.
- 6 Wet towel may be used to wipe the equipment surface. However, do not have it contact with water directly.
- 7 After cleaning the equipment, please ensure it is completely dried before using.

Troubleshooting


Troubles	Causes	Solutions
No power supply input	Poor socket contact	Repair or replace the socket
	Input control wire failure	Repair the failure point
High cabinet temperature	Near a heat source	Move the counter or the heat source
	Frost block	Defrost manually
	Over-inventory in the cabinet which blocks the air outlet and inlet	Take out part of the goods, move them away from the air outlet and inlet
	Refrigerant leaking	Check the leak and refill refrigerant
	Condenser contaminated	Clean the dust-hood
	Fan failure	Repair or replace the fan
	Temperature controller failure	Replace the temperature controller
	Temperature control probe touch the bottom	Replace the position of temperature control probe
Too much noise	The product is not put smoothly	Adjust the feet
	The set screws of fans or compressor are loose	Tighten the screws
The compressor is not running	The voltage is beyond the permitted range	Use a voltage regulator, and connect with the appropriate power supply
	Temperature controller failure	Replace the temperature controller
	The compressor damage	Replace the compressor
The light failure	Switch off or failure	Turn on the switch
	Wire connection is not reliable	Check the plug point
	The light power supply damaged	Replace the light power supply
	light damaged	Replace the light

Note:

1. For simple troubleshooting, please be sure to disconnect the power supply.
2. For the maintenance and replacement work, please call for professionals or the maintenance staff from the refrigeration factory of the manufacturer.
3. If the above methods could not solve the problem, please call for


professionals.

Structure diagram

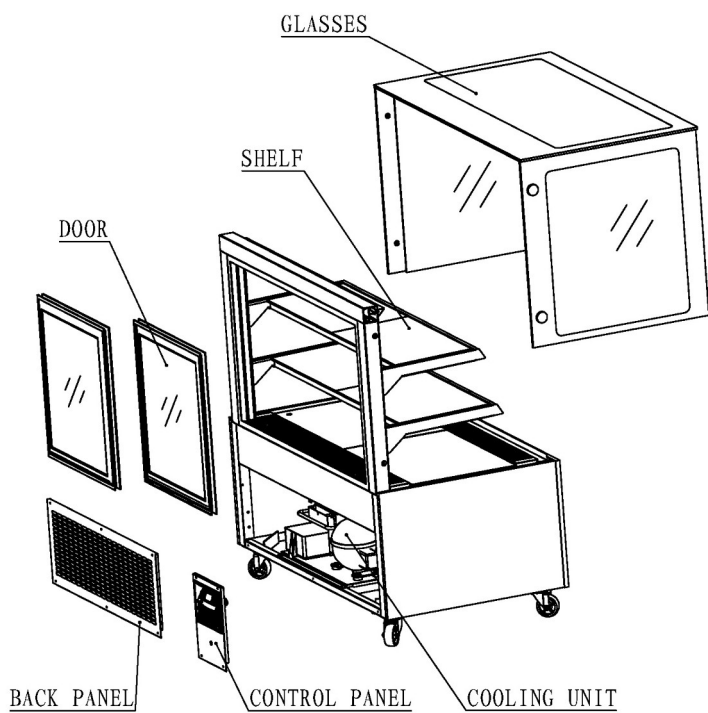

Note: refer to the real object in case of change of the product structure.

Circuit diagram

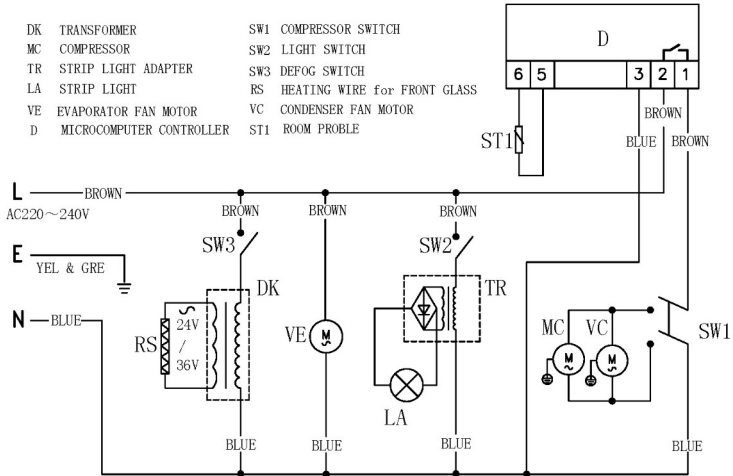

Note: the part in dotted line box is not applicable to some types. Please refer to the real object for the wiring circuit.

Microcomputer Controller Operation Instruction



2 The setting values for the products as follows:



SET To display target set point.
In programming mode it selects a parameter or confirm an operation



To start a manual defrost




In programming mode it browses the parameter codes or increase the display value



In programming mode it browses the parameter codes or decrease the display value



To lock or unlock the keyboard



To enter in programming mode

To return to room temperature display



Major technical parameters

Model	Climate type	Volume (L)	Storage temperature (℃)	Power supply	Rated current (A)	Refrigerant	Dimension (L×W×H /mm)	Weight (kg)
Right-angle Display Cabinet								
WDG096F	3	270	2~10	220~240V 50Hz	2.3	R290/90	900×660×1200	120
WDG126F	3	370			2.5	R290/90	1200×660×1200	141
WDG156F	3	470			3	R290/110	1500×660×1200	164
WDG186F	3	570			3.3	R290/110	1800×660×1200	182
Single-arc Display Cabinet								
WDG096D	3	218	2~10	220~240V 50Hz	2.3	R290/90	900×660×1200	104
WDG126D	3	299			2.5	R290/90	1200×660×1200	120
WDG156D	3	380			3	R290/110	1500×660×1200	142
WDG186D	3	461			3.3	R290/110	1800×660×1200	164
Double-arc Display Cabinet								
WDG096FY	3	191	2~10	220~240V 50Hz	2.3	R290/90	900×660×1200	112
WDG126FY	3	262			2.5	R290/90	1200×660×1200	124
WDG156FY	3	332			3	R290/110	1500×660×1200	150
WDG186FY	3	403			3.3	R290/110	1800×660×1200	167
Single-arc Display Cabinet								
WDG096DY	3	218	2~10	220~240V 50Hz	2.3	R290/90	900×660×1200	93
WDG126DY	3	299			2.5	R290/90	1200×660×1200	110
WDG156DY	3	380			3	R290/110	1500×660×1200	126
WDG186DY	3	461			3.3	R290/110	1800×660×1200	141

- 1 These products are designed with climate type 3 (25°C, RH60%) ;
 2 These products are designed with electric shock protection type I.

Disposal of the product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances.

The product is up to standard

1. IEC/EN 60335-1 Household and similar electrical appliances - Safety - Part 1: General requirements
2. IEC/EN 60335-2-89 Household and similar electrical appliances - Safety - Part 2-89: Particular requirements for commercial refrigerating appliances with an incorporated or remote refrigerant condensiNg unit or compressor

2006/42/EC

2012/19/EU

EN 60335-1

EN 62233

EN 61000-3-2

EN 55014-2

2014/30/EU

2011/65/EU

EN 60335-2-89

EN 55014-1

EN 61000-3-3

